

SIRONA T2 RACER AND T3 RACER REPLACEMENT TURBINE INSTALLATION INSTRUCTIONS

Note: Handpiece should be cleaned and sterilized prior to installation

1. Place handpiece onto a smooth, flat surface. Unscrew the back cap and remove the spent turbine from the head and then from the back cap.
2. Using an explorer, remove worn 'O' ring from inside the head of the handpiece. Then, remove the spring washer and the white plastic shim from the head and set them aside.
3. Using an explorer, remove worn 'O' ring from the back cap. Then, remove spring washer from the back cap and set it aside. *Note: For reassembly, the head and back cap spring washers are interchangeable.*
4. Thoroughly clean the head and back cap with spray cleaner and a cotton swab. Use air syringe to blow any remaining cotton fibers from within the head of the handpiece and from the back cap.
5. Using an explorer, place one of the set aside spring washers inside the back cap, and then place a new 'O' ring into the open slot inside the back cap.
6. Using an explorer, place the remaining spring washer back inside the head of the handpiece and position the white plastic shim on top of the spring washer, then place a new 'O' ring into the slot in the head of the handpiece.
7. Hold the new turbine upright (bur end up) and carefully insert its back bearing (opposite bur end) into the back cap. While inserting the turbine into the back cap, gently rock turbine back and forth to properly seat. Test to see if properly seated by inverting the turbine (back cap up) and spinning the back cap - the back cap should spin freely.

You are now ready to install the turbine into the head of the handpiece.

8. Holding the turbine/back cap combination by the back cap with the bur end up, insert it into the head of the handpiece and carefully screw back cap to the head 1/2 turn. Gently move bur from side to side to help seat the turbine fully in the head. *The bur should always spin freely during this step. Continue to do this until the cap is fully secured. If bur does not spin freely at any time during this step, stop, and repeat step.*
9. Fully tighten back cap with wrench.
10. Place 3 drops of handpiece lubricant into the drive air tube. Operate handpiece until all excess lubricant is expelled.
11. If the handpiece does not run smoothly or if it makes an unusual noise after all lubricant is expelled, re-install the turbine.

To extend the life and maintain the performance of your high-speed handpiece, clean, then lubricate, and then expel all excess lubricant before each autoclave cycle. Always operate handpiece below 38 PSI, and avoid using extended burs.

Warranty on this product is 6 months.

For technical support call, toll free 1-631-675-6961